



72—181 Removal and installation of rear door window lift

Removal

- 1 Remove door liner (72—101).
- 2 Remove plastic sheet.
- 3 Unscrew both window lift rail bolts and take window lift rail off of window retaining rail.
- 4 Press crank operated window upward and hold with a wedge.

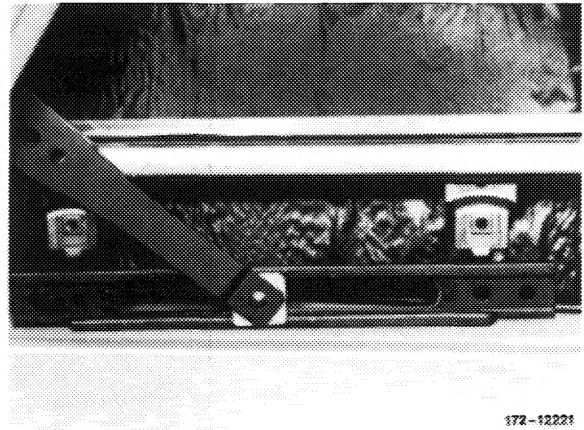

- 5 Unscrew bolts and take window lift off of inside door panel.

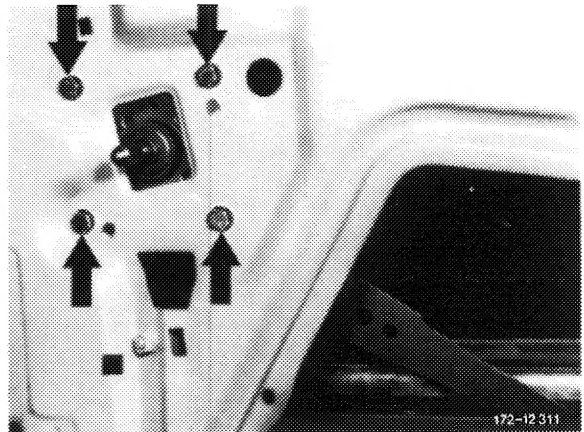

Installation

- 6 Attach window lift to inside door panel.
- 7 Continue installation in reverse sequence of removal.

